

Instructions: TITAN pt. no.: 99 0000 0877

TITAN Fuel Tanks™

TITAN™ Travel Trekker™ Auxiliary Fuel Systems

INSTALLATION GUIDE

9900013 Aluminum Body Insulator Kit for *Travel Trekker 40™*


Some manufacturers of the new aluminum body pickup trucks recommend that no steel components be attached directly to the body. While TITAN's in-bed products are made of military grade polymer, the mounting brackets are steel. The addition of this kit to the Travel Trekker™ insulates the steel components from the aluminum body.




Aluminum Body Insulator Kit Parts List

<u>No.</u>	<u>Part Description</u>	<u>TITAN Part Number</u>	<u>Quantity</u>
1	3/8" -16 x 2" Carriage Bolt, Grd 5, Zinc-Plated	99 0000 0794	8
2	Rubber Bushing	99 0000 0792	8
3	Polymer Mounting Spacer	99 0000 0871	2
4	Polymer Double Washer	99 0000 0799	4
	Extra-length Grounding Cable Kit	99 0178 0000	1

NOTE: The “Extra-length Grounding Cable Kit” must be used instead of the standard cable normally provided to ground the tank. The long cable will need to be grounded to the steel frame of the chassis, not to any aluminum components of the body. It may require a hole to be drilled through the truck bed to run the cable from the ground point on the tank down to the chassis frame.

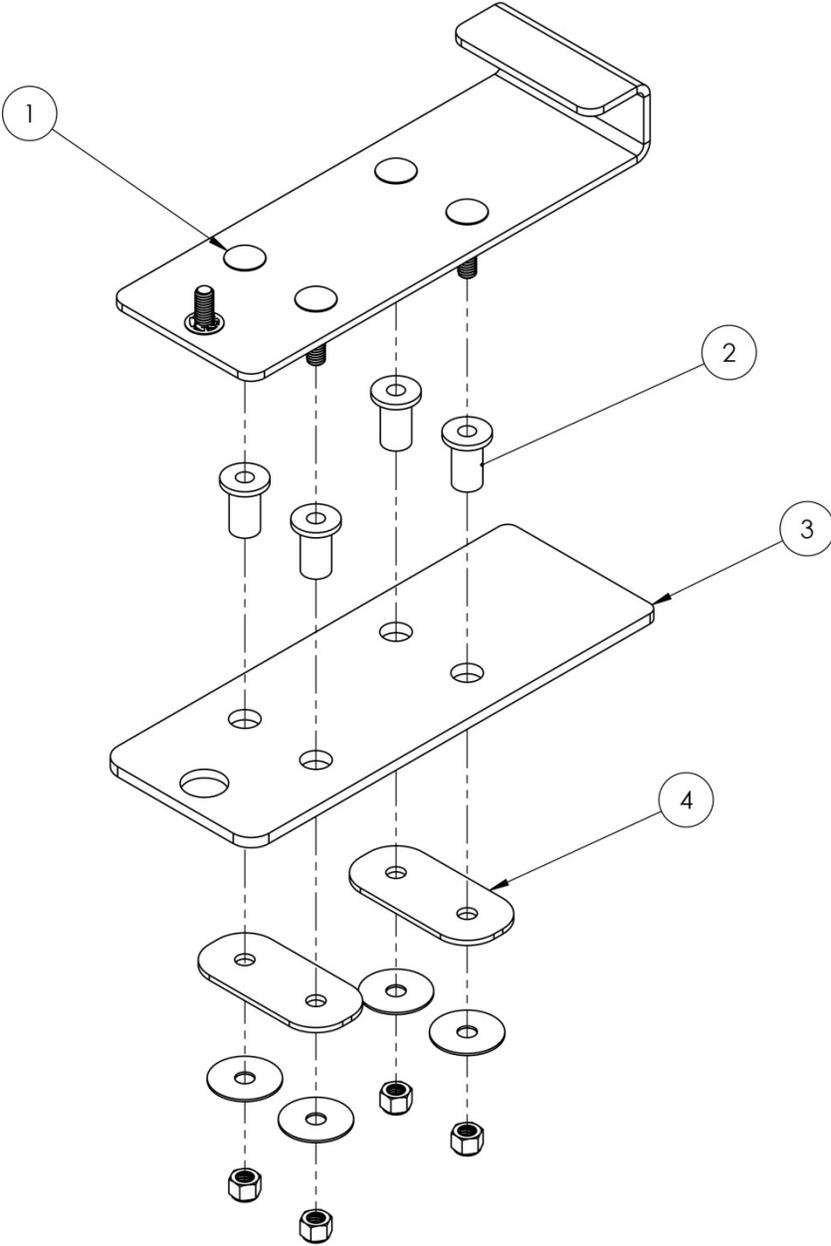

Exploded view showing proper installation of Aluminum Body Insulator Ki

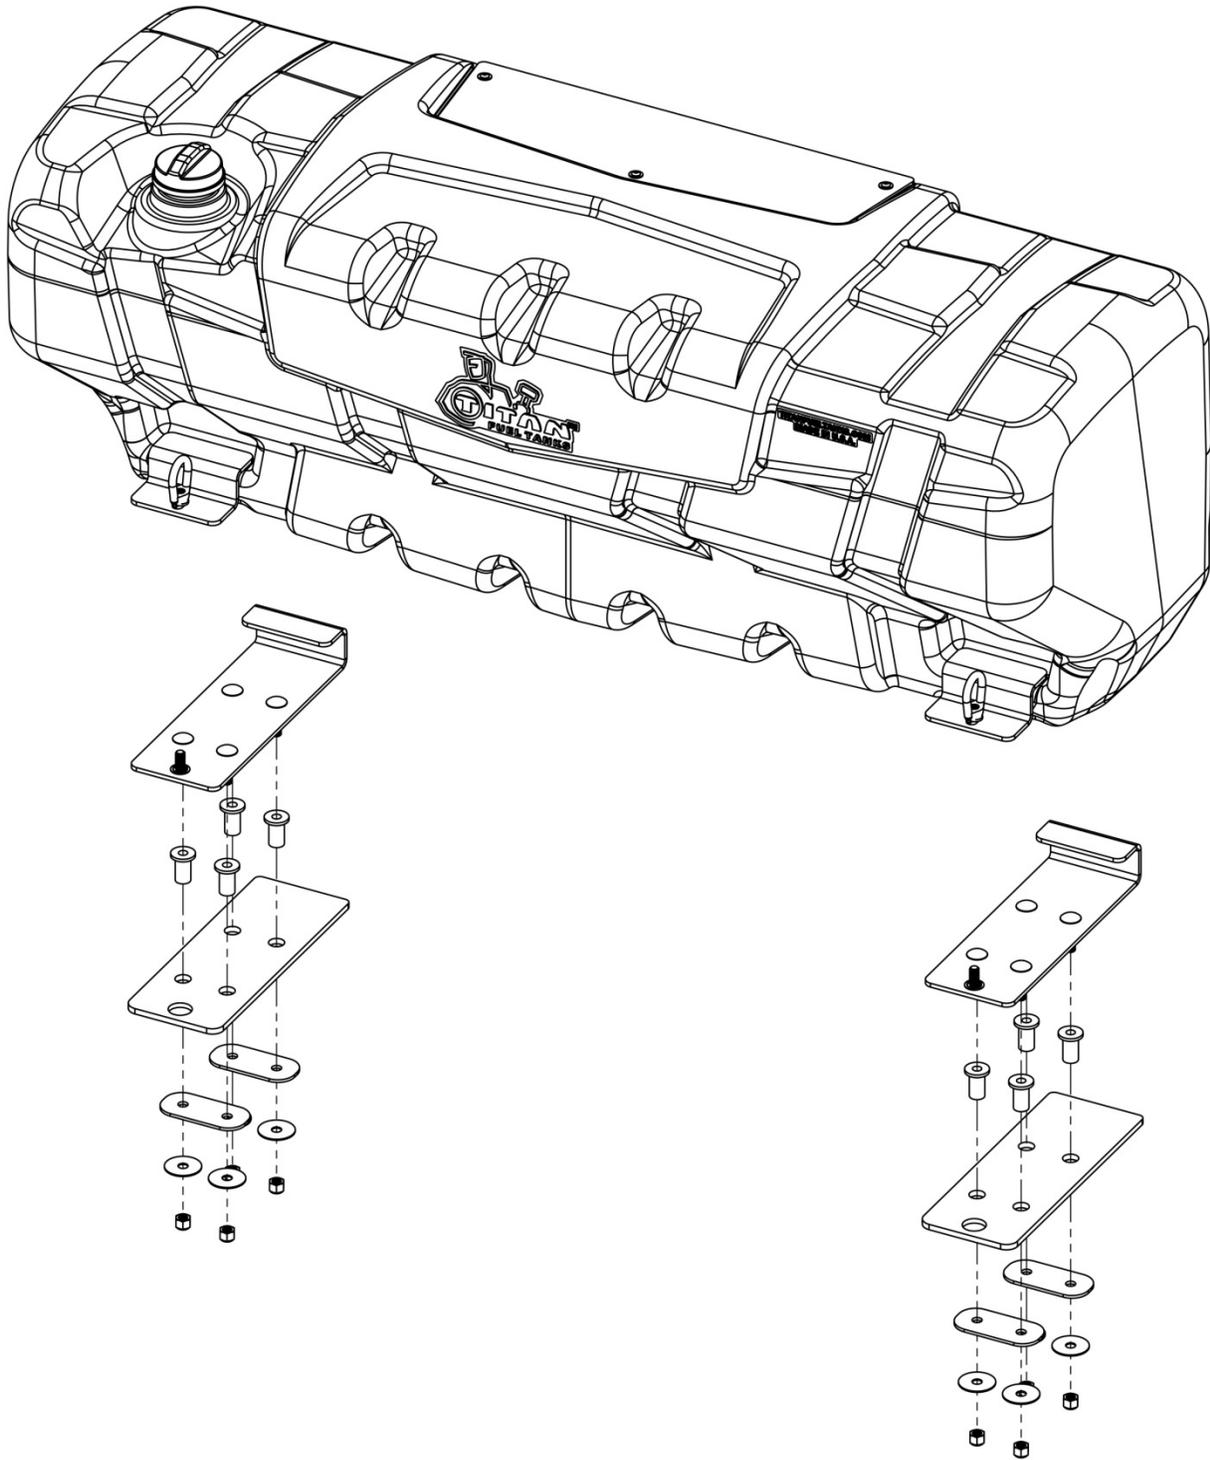

This is an exploded view showing proper installation of the Aluminum Body Insulator Kit under the tank mounting brackets on top of; and Polymer Double Washers underneath the truck bed. Be sure to see *Travel Trekker 40™* Installation Instructions.

NOTE: All torque settings are the same as listed in the *Travel Trekker 40™* Installation Instructions.



**P.O. Box 2225
Idaho Falls, ID 83403 USA
Telephone (800) 728-4982 FAX (208) 529-2162**

www.titanfueeltanks.com

TITAN Fuel Tanks™ are PROUDLY MADE IN THE USA

Revised 6.22.18

©2018 Supertanks, LLC

All Rights Reserved.